

Warning

The earcap region of this telephone may attract and retain small metallic objects.

Guarantee and clauses

We, Alcatel Business Systems, hereby declare that we assume the Alcatel Premium Reflexes to be compliant with the essential requirements of Directive 1999/5/CE of the European Parliament and Council.

Any unauthorised modification to the product shall render this declaration of compliance null and void. A copy of the original of this declaration of compliance can be obtained by post from:

Alcatel Business Systems - Technical Services - Approvals Manager I, route du Dr. Albert Schweitzer - F 67408 Illkirch Cedex - France





Using your telephone



Making a call













dia

dial the number for your call



To make an external call, dial the outside line access code before dialling your correspondent's number.











lift the receiver

hands free

Redialling







select the "redial" function

number called



Making a call-back request

your correspondent does not reply or is busy



back request" key





programmed "call-

call-back request function code



Directory



Using call by name



enter the name or initials or the surname and first name of your correspondent









to search by surname









display of the first name and the number of solutions found





start the search









display the number of the proposed name















show next name

show previous





Your directory can contain up to 12 numbers.













internal or outside number to be entered










directory

numeric key on which you want to programme the number

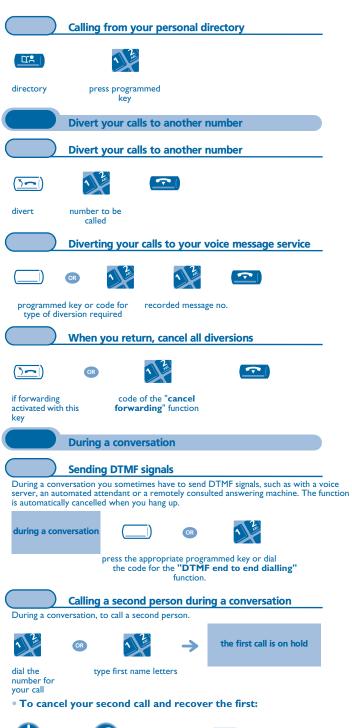

(6=6) single-line

terminal

hang up

lift the receiver

Receiving a second call

During a conversation, another person is trying to call you.



name of caller is

displayed for 3



line key for which icon

is flashing





programmed key "consulting call on hold" (single-line terminal)



seconds

the first call is on hold

Switching between two calls (Broker call)

During a conversation, a second call is on hold. To accept the second call:







the first call is on hold

line key corresponding to icon

broker call (single-line terminal)



Transferring a call

During a conversation, to transfer the call to another number:









number to be called

transfer

single-line terminal only



Three-way conference

During a conversation, a second call is on hold.







"conference" programmed key

code for function "conference"

Use the same procedure to cancel the conference and recover the first call.



Voice message service



Consulting your voice mailbox

The light indicates that messages have been received.





display number of new messages









follow the instructions of the voice quide

number of voice messages





Programming your personal code

This password controls access to the programming and terminal locking functions by the user (default password: 0000).







code of the "change personal code" function

enter the old password

enter the new password (twice)



Adjusting the audio functions

Terminal idle:









choose the tune (16)

adjusting the ringer volume

apply your choice



Adjusting screen brightness











code of the programming choose the brightness

apply your choice

brightness function

Installing the programmable key label

A printed label is supplied with the terminal. This should be installed beneath the programmable keys.



- Insert a flat "blade" into the slot (I slot per key block).
- Raise the cover.
- Slide the printed label into position. 3.
- Replace the cover.