

# Alcatel-Lucent 500 DECT Handset

Alcatel-Lucent OmniPCX Enterprise  
[User manual](#)







Thank you for choosing an Alcatel-Lucent phone.

The availability of certain functions described in this guide may depend on the version or configuration of your system. If your phone works on GAP mode, some features are not available. If in doubt, consult the person responsible for your system.

Alcatel-Lucent, Lucent, Alcatel-Lucent and the Alcatel-Lucent logo are trademarks of Alcatel-Lucent. All other trademarks are the property of their respective owners. The information presented is subject to change without notice. Alcatel-Lucent assumes no responsibility for inaccuracies contained herein. Copyright © 2011 Alcatel-Lucent. All rights reserved

### How to read this guide

	On hook/Off hook key
	keys to validate or select a menu or option
	Navigation keys: used to navigate the menus or in a text field when entering characters ;
	Use the keypad to enter digits and letters.

### Important information

These symbols can be supplemented by small icons or texts. All default or customized function codes are given in the table of codes in the appended sheet.



	<b>Your telephone</b> .....	<b>p. 6</b>
<b>1.</b>	<b>Getting started</b> .....	<b>p. 7</b>
	1.1 Installing the battery in the telephone .....	p. 7
	1.2 Charging your telephone battery .....	p. 7
	1.3 Switching on your telephone .....	p. 8
	1.4 Install a bluetooth device (pairing) .....	p. 8
	1.5 Installing the memory card .....	p. 10
<b>2.</b>	<b>Using your telephone</b> .....	<b>p. 11</b>
	2.1 Access MENU .....	p. 11
	2.2 Making a call .....	p. 11
	2.3 Receiving a call .....	p. 11
	2.4 Answering an internal call in intercom mode .....	p. 12
	2.5 Calling from your personal directory .....	p. 12
	2.6 Programming your personal directory .....	p. 13
	2.7 Speed dial .....	p. 14
	2.8 Making a call-back request .....	p. 14
	2.9 Calls log .....	p. 14
	2.10 Activate / Deactivate voice frequency .....	p. 15
<b>3.</b>	<b>During a conversation</b> .....	<b>p. 16</b>
	3.1 Introduction .....	p. 16
	3.2 Activate/deactivate loudspeaker .....	p. 16
	3.3 Mute, so that your correspondent cannot hear you .....	p. 16
	3.4 Putting a caller on hold .....	p. 16
	3.5 Make a second call .....	p. 16
	3.6 Receiving a second call .....	p. 17
	3.7 Switching between two calls (Broker call) .....	p. 17
	3.8 Transferring a call .....	p. 17
	3.9 Setting up a conference .....	p. 18
<b>4.</b>	<b>Programming your telephone</b> .....	<b>p. 19</b>
	4.1 Lock/unlock keypad .....	p. 19
	4.2 Adjusting the audio functions .....	p. 19
	4.3 Activate/deactivate silent mode .....	p. 19
	4.4 Activate/Deactivate the vibrating ringer .....	p. 20
	4.5 Selecting language .....	p. 20
	4.6 Set time and date .....	p. 20
	4.7 Use profiles to customize your handset .....	p. 21
	4.8 Customize the handset display .....	p. 21
	4.9 Configure the keys to answer a call .....	p. 22
	4.10 Call duration and number of messages .....	p. 22
	4.11 Call screening .....	p. 23
	4.12 Configure your phone during charging .....	p. 23
	4.13 Affected shortcuts to the navigation keys (out of navigation use) .....	p. 23
	4.14 Associate states of the handset to the LED colours .....	p. 24
	4.15 Change the PIN Code .....	p. 24
	4.16 Enable or disable the Automatic keypad lock feature .....	p. 24
	4.17 Enable or disable the phone lock feature .....	p. 25
<b>5.</b>	<b>Keep in touch</b> .....	<b>p. 26</b>
	5.1 Introduction .....	p. 26
	5.2 Redialing .....	p. 26
	5.3 Immediate forward to a number .....	p. 26
	5.4 Diverting your calls to your voice message service .....	p. 27
	5.5 Cancelling all diversions .....	p. 27
	5.6 Consulting your voice mailbox .....	p. 27
	5.7 Additional services .....	p. 28
	5.8 Text mail .....	p. 28
<b>6.</b>	<b>Registering the telephone</b> .....	<b>p. 29</b>
	6.1 Subscribing the handset to a DECT system .....	p. 29
	6.2 Selecting your telephone system .....	p. 30

<b>7.</b>	<b>Utilities</b>	<b>p. 31</b>
	7.1 Calendar .....	p. 31
	7.2 Calculator .....	p. 32
	7.3 Stopwatch .....	p. 32
	7.4 Wake up services .....	p. 33
<b>8.</b>	<b>Accessories</b>	<b>p. 34</b>
	8.1 Characteristics of the mains power adapter .....	p. 34
	8.2 Headphone / external microphone .....	p. 34
	8.3 Cleaning your telephone .....	p. 34
	8.4 Transporting and protecting your telephone .....	p. 34
<b>9.</b>	<b>Precautions for use / Declaration of compliance</b>	<b>p. 35</b>








# Your telephone

## ■ Status icons

-  Battery charge level
-  Radio reception quality
-  Filtered calls
-  Silent mode activated
-  Programmed call-back time
-  Set is locked
-  Missed calls


## ■ Call icons

-  Incoming call
-  Outgoing call
-  Loudspeaker activated
-  Silent mode activated (Loudspeaker vol)
-  Silent mode activated (Microphone)

### Light

The LED settings depend on the configuration of the set (see Associate states of the handset to the LED colours)

### Back-lit screen

The screen switches off automatically after a few seconds of inactivity. To turn it back on, press the key 

### ■ Adjust audio volume

### ■ Red key : Alarm call (Option)

### ■ Activate/deactivate loudspeaker

- Calls log (Redial)
- Lock/unlock keypad
- Apply

### ■ Lift the receiver

### Headset socket

### ■ Apply

- Navigate (up, down, left, right)
- Affected shortcuts to the navigation keys (out of navigation use)
- **Activate/deactivate loudspeaker**
- Access your personal directory
- Switch the screen on again

- Access MENU : Message service, Personal directory, Settings menu items, Calls log,
- Erase a character

### ■ Switch on / off

- Hang up
- Return to first screen / return to previous menu
- Switch off ringer

 
### ■ Silent mode (long press)




Microphone

## 1.1 Installing the battery in the telephone


### Installing the battery in the telephone

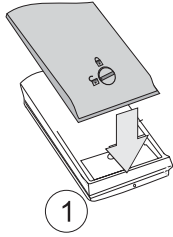

 Before inserting the battery module into the phone, make sure that its lock is in the unlocked position

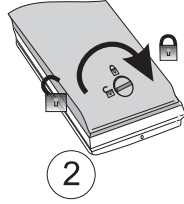


 While maintaining the battery module in position, slip the lock to the locked position

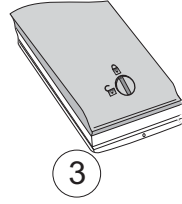


Check that the battery module is properly installed in its housing


### To remove it

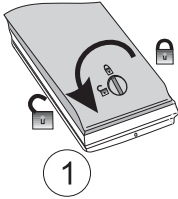 

Slip the lock to the unlocked position

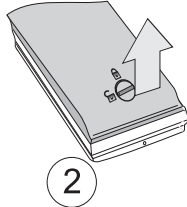 

Lift the battery module from the bottom

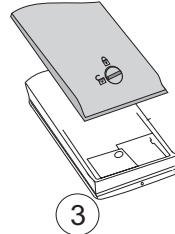 

You can then remove the battery module


## 1.2 Charging your telephone battery



 It is important to fully charge your phone before using it for the first time.





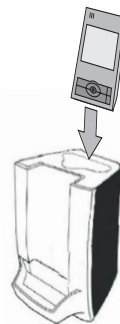


Connect the charger and place the telephone in the charging holder;. The battery charger LED lights. The battery LED is in charging mode on the phone screen.  
If the battery is completely discharged, a charging time of several minutes is required before the set will light up again.





A charging location in the back of the charger is dedicated for loading an extra battery :

- Open the protection cover in the back of the charger
- Place the battery in the dedicated location
- A LED indicates that the battery is properly installed and is charging


## Battery charge

 	Battery fully charged (75% - 100%)
	Battery half charged (33% - 75%)
	Low battery (0% - 33%)
	Battery completely discharged (0%)
	Battery charge icon is animated when the phone is on the charger

 Recharge your telephone battery regularly. The telephone can be on or off when recharging the battery. If the telephone is to remain unused or out of its charger for several weeks, remove the battery and store it separately.


 The battery of the phone or the spare battery pack is fully charged when the chargers led (white) lights off.

## 1.3 Switching on your telephone




Long press


Press the switch on/off key (long press).  
Wait a few seconds (about 3s).  
Your telephone is switched on

 Press on the same key (long press) to switch off the handset.

## 1.4 Install a bluetooth device (pairing)

  Before using a Bluetooth device with your phone, you must install the Bluetooth module in your phone.  
For more information, contact your installer or administrator.

### ■ Install the Bluetooth module

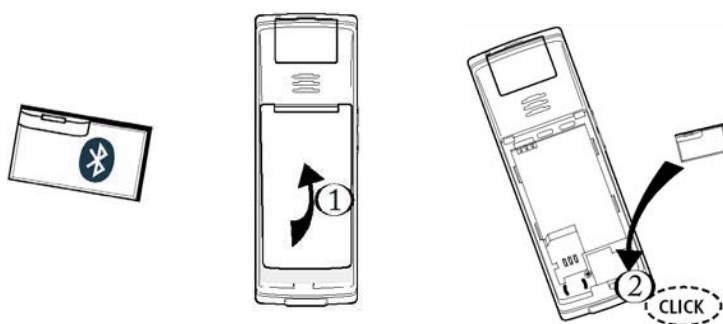






You must be in possession of the Bluetooth module for your phone


Turn off the handset  
Slip the lock to the unlocked position  
Lift the battery module

Insert the Bluetooth module (You should hear a click when the module is in place)  
Installing the battery in the telephone  
Turn on the handset



■ Enable Bluetooth


 
 



	<b>Menu</b>	Access MENU
	<b>Select</b>	<b>Access to the handset settings menu</b>
		Select the tab: Connectivity
	<b>Bluetooth Select</b>	
	<b>Yes</b>	Enable Bluetooth

 To disable Bluetooth, follow the same procedure by selecting No


 If the module is not installed, the Bluetooth menu is not accessible

■ Install a bluetooth device (pairing)

To use your Bluetooth device, it must be paired to the set. To manage the pairing, the Bluetooth device must be in detectable mode. Refer to your Bluetooth device documentation to find out how to activate detectable mode.

		Your Bluetooth device is ready to be paired
	<b>Menu</b>	Access MENU
	<b>Select</b>	<b>Access to the handset settings menu</b>
		Select the tab: Connectivity
	<b>Search for devices</b>	The set scans for available Bluetooth devices
	<b>Select</b>	Select the Bluetooth device to be paired
	<b>Ok</b>	Enter the device's PIN code
		Bluetooth device connected

## 1.5 Installing the memory card

 

You must be in possession of the memory card for your phone

Turn off the handset  
Slip the lock to the unlocked position  
Lift the battery module

Slide in the memory card from under the two small crescents and press it as shown in figure  
Installing the battery in the telephone  
Turn on the handset



When an empty memory card is inserted, the configuration of the handset is copied to the memory card. Note that the DECT subscriptions of the handset are also moved to the memorycard. Therefore, when you remove the memory card from the handset you won't be able to make or receive calls with your handset



Dropping the handset may cause the memory card to dislodge inside the handset. When this happens, the user will be warned via an audible warning signal every 5 seconds, and the message 'Check memory card' is given. Please insert the memory card correctly in the handset.

## 2.1 Access MENU



**Menu**

Select a function in the MENU  
It provides access to all the functions available on your system.



**Select**

Navigate in the menus and select the menu of your choice



**Change PIN code** : consult and send voice and text messages.



**Automatic keylock** : From the call log, select one of the last numbers dialed



**Phone lock** : Access your personal directory



**Calendar** : manage your appointments, your meetings , program a call-back time.



**Accessories** : access to the calculator, countdown or wake up features



**Settings** : adjust contrast, activate or deactivate the beeps, lighting, etc.

## 2.2 Making a call



**Dial**

Send the call

**You are in communication**



Hang up, to terminate a call



To make an external call, dial the outside line access code before dialing your contact's number (0 by default).  
For the operator, dial '0' (by default).

## 2.3 Receiving a call



You are receiving a call : lift the receiver



**You are in communication**

Hang up, to terminate a call



You can also configure your handset to answer a call by pressing any key or automatically without pressing any key ; (see: Configure the keys to answer a call).

 
### ■ Switch off ringer



**Silence**

Your phone does not ring anymore but you can answer the call at any time

■ Reject call

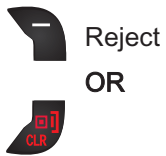


Reject  
OR

## 2.4 Answering an internal call in intercom mode

 In the interphony, calls are automatically answered on the handset

■ Activate intercom mode

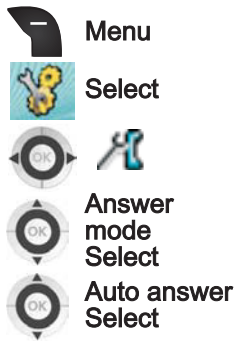

Access MENU

**Access to the handset settings menu**

Select the tab: Calls

 


The interphony mode stays activated after the end of the communication.



The interphony mode stays activated as long as the handset profile is not modified by user.

## 2.5 Calling from your personal directory (Individual number)

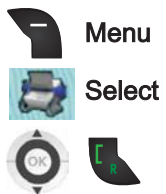


Access MENU

**Access your personal directory**

Select the name of the person you wish to call  
Send the call




Quick access (by default) : Up navigation key 















If you have access to directories (personal and company), you must select the personal directory. If not, the personal directory is automatically displayed. You can search for a name in your contacts list by entering the first letter of the name.


## 2.6 Programming your personal directory


 Without a memory card, your personal directory can contain up to 20 contacts (200 with a memory card). A contact can contain up to 4 numbers.

There are 4 different number types:

-  Home
-  Mobile
-  Work
-  Other

	<b>Menu</b>	Access MENU
	<b>Select</b>	<b>Access your personal directory</b>
	<b>New contact</b>	Place on cursor (highlight)
		Select the type of contact (Home , Mobile , Work , Other)
	<b>Add</b>	
	<b>Save</b>	Enter the number
	<b>Save</b>	Enter the name
	<b>Yes</b>	Apply

 To key in the name: the keys in the keypad include letters that you can display by pressing them successively.  
Example: press '8' twice to display the letter 'U'.

 When entering text, you can switch to the upper case mode, lower case and the numeric keypad by pressing successively on the # key.

## 2.7 Speed dial



This feature allows you to associate a contact to a key on the keypad. Therefore, pressing and holding on this key will automatically start the call to the associated contact. This feature allows to associate a contact or a feature code to a key on the keypad. Pressing and holding on this key will automatically start the call to the contact or will activate the associated feature



Menu

Access MENU



Select

Access your personal directory



More  
Speed dial

Select one of your contacts



Select  
Add

Select the key to programme (0 to 9).



Replace  
Delete

As appropriate, you can add, replace or delete the number or feature associated with the key.

Back to homepage

## 2.8 Making a call-back request (single-line terminal only)

When you call, your correspondent does not answer or is busy



Enter the feature code: **Call-back request:**



When a correspondent requests a callback, you can consult by hooking off the set and dialing the correspondent's callback requests consultation code.



This feature is available only if supported by your communication system. Contact your administrator to determine if you can use this feature.

## 2.9 Calls log

All incoming, outgoing, missed or unanswered calls are displayed in the call log.



Call

Access to the calls log

All incoming, outgoing, missed or unanswered calls are displayed in the call log

Select the desired log:

all calls

answered calls

sent calls

missed calls



More

Select the recipient from the call log

To see your correspondent details

From the call log, you can save the correspondent in your contacts, send a message to the correspondent, etc.



The call log can also be accessed from the menu .

## 2.10 Activate / Deactivate voice frequency

During a conversation you sometimes have to send DTMF signals, such as with a voice server, an automated attendant or a remotely consulted answering machine.



### During a conversation

Press the star key (hold down for a few seconds).



The function is automatically cancelled when you hang up.



Depending on the system's configuration, the voice frequency can be activated by default.  
For more information, contact your installer or administrator.

## 3.1 Introduction

Your system offers a wide range of services and features. To activate a feature while in communication, enter the feature code directly. For information on the features codes list, contact your installer or administrator. The operation of your phone depends on its single-line or multiline installation. By default, your set is installed as a single-line set. For more information regarding this configuration, contact the person in charge of your installation.

## 3.2 Activate/deactivate loudspeaker



Spk on

**You are on a call**

Activate loudspeaker



Spk off

Deactivate loudspeaker

## 3.3 Mute, so that your correspondent cannot hear you

During the call, you do not wish your caller to hear you.



Mute

**You are on a call**

'Mute' mode is activated. Your caller can no longer hear you



Unmute

Your correspondent hears you again.

## 3.4 Putting a caller on hold

During a conversation, you wish to place the call on hold and recover it later, on the same telephone.

### ■ Single-line set



**You are in conversation with one correspondent**

Enter the feature code: **Enquiry call**  
the call is placed on hold

### ■ Multiline set



**You are in conversation with one correspondent**

The call is placed on hold



Recover the correspondent on hold : follow the same procedure.

## 3.5 Make a second call

**You are in communication with a first correspondent**



Dial directly number  
the first call is on hold



You can call the second correspondent from the directory using the keyboard shortcuts.



### 3.6 Receiving a second call



**You are in conversation and a correspondent is trying to contact you: display the correspondent's identity**  
You wish to take the call immediately:

#### ■ Single-line set



Enter the feature code: **On hold call consultation**  
first call is automatically placed on hold

#### ■ Multiline set



First call is automatically placed on hold

### 3.7 Switching between two calls (Broker call)

You are in communication with the first correspondent and the second is on hold. You are in conversation with the first correspondent and the second is on hold. You want to switch from one correspondent to the other.

#### ■ Single-line set



Enter the feature code: **Broker call**  
You are in conversation with the second correspondent and the first one is on hold. You are in conversation with the second correspondent and the first is on hold



Enter the feature code: **Broker call**  
You are in conversation with the first correspondent and the second is on hold. You are back in conversation with the first correspondent and the second is on hold.

#### ■ Multiline set



You are in conversation with the second correspondent and the first one is on hold. You are in conversation with the second correspondent and the first is on hold



You are in conversation with the first correspondent and the second is on hold. You are back in conversation with the first correspondent and the second is on hold.

### 3.8 Transferring a call (single-line terminal only)

After dialling the destination number, you can transfer the call directly without waiting for your correspondent's reply by validating the 'Transfer' option. You can initiate the transfer by using the icon or the 'Transfer' text. The transfer between two external correspondents and the transfer by pressing the hang-up key depend on the system configuration.

**You are in communication with a first correspondent**

**Calling a second person during a conversation**



Hang up the ongoing call  
**The two correspondents are connected**



Multiline set

If the transfer feature is not available, when you hang up, the communication is ended and you are put in communication with the correspondent on hold.

### 3.9 Setting up a conference (single-line terminal only)



You are in communication with a first correspondent. A second correspondent is on hold.

Enter the feature code: **Three-party conference**  
You are in conference mode



Use the same procedure to cancel the conference and recover the first call.

## 4.1 Lock/unlock keypad

  **Lock** | Lock the keypad



  **Unlock** | Unlock your phone

## 4.2 Adjusting the audio functions


Your handset allows you to set different ringtones depending on the type of incoming call.


 **Menu** | Access MENU


 **Select** | Access to the handset settings menu

  | Select the tab: Sounds & alerts


### Choose the tune


 **Select** | Select the type of call to which the ringing is to be associated

 | Select the melody of your choice

 **Play  
Stop  
Select** | You can : play/stop the melody and select the melody

### Adjusting the ringer volume

 **Ring volume  
Select** | Select the type of call to which the ringing is to be associated



 | Select the volume of your choice

 **Ok** | Apply

## 4.3 Activate/deactivate silent mode


 **Menu** | Access MENU

 **Select** | Access to the handset settings menu

  | Select the tab: General

 **Profiles  
Select**

 **Select  
profile  
Select**


 




 **Silent  
Select** | Silent mode activated









Quick access : # (long press)

This key lets you switch from normal mode to silent mode and vice versa


 









#### 4.4 Activate/Deactivate the vibrating ringer

	<b>Menu</b>	Access MENU
	<b>Select</b>	<b>Access to the handset settings menu</b>
		Select the tab: Sounds & alerts
	<b>Vibrator Select</b>	
	<b>Select</b>	Off : vibration deactivated Vibrate then ring : the handset vibrates and then rings Vibrate only : the handset vibrates and doesn't ring Vibrate and ring : the handset vibrates and rings alternately

#### 4.5 Selecting language

	<b>Menu</b>	Access MENU
	<b>Select</b>	<b>Access to the handset settings menu</b>
		Select the tab: General
	<b>Language Select</b>	
	<b>Select</b>	Select the language of your choice

#### 4.6 Set time and date

	<b>Menu</b>	Access MENU
	<b>Select</b>	<b>Access to the handset settings menu</b>
		Select the tab: General
	<b>Time &amp; date Select</b>	
	<b>Time Select</b>	
	<b>Save</b>	Set time
	<b>More</b>	Select Time Format
	<b>Date Select</b>	
	<b>Save</b>	Enter date
	<b>More</b>	Choose the date format

## 4.7 Use profiles to customize your handset

You can configure the next options for each profile:

**Ring volume , Ring external , Ring internal , Ring unknown call , Ring emergency** : Melody according to the incoming call type

**Ring normal msg. , Ring urgent msg.** : Melody according to the incoming message type

**Increasing ring** : Progressive ringing

**Alert volume , Alert tone , Increasing alert** : Volume and type of melody alert

**Vibrator** : Buzzer (Mobile 200)


 
 



**Key sound** : The phone beeps each time you press a key

**Confirmation sound** : A beep sounds at every confirmation step


 




**Coverage warning** : An alarm warns you when your handset is out of the DECT coverage


**Charger warning** : An alarm warns you that your phone is charging

### ■ Select a profile


 
 
	<b>Menu</b>	Access MENU
	<b>Select</b>	<b>Access to the handset settings menu</b>
	<b>Profiles</b>	Select the tab: General
	<b>Select</b>	
	<b>Select</b>	
	<b>Select</b>	Select a profile

### Modify a profile



	<b>Menu</b>	Access MENU
	<b>Select</b>	<b>Access to the handset settings menu</b>
	<b>Profiles</b>	Select the tab: General
	<b>Select</b>	
	<b>Select</b>	
	<b>Select</b>	Select and modify the desired function (follow information displayed on the screen)

 You can reset the defaults values by selecting Reset profiles.

## 4.8 Customize the handset display

	<b>Menu</b>	Access MENU
	<b>Select</b>	<b>Access to the handset settings menu</b>
	<b>Profiles</b>	Select the tab: <b>Display</b>

### ■ Change the wallpaper:

	<b>Wallpaper</b>	You can choose between displaying an image, using the active theme or leaving the screen empty
	<b>Select</b>	

- Change the theme of your phone



**Themes**  
Select  
Select

Select the desired new theme from the list

- Define the startup screen



**Startup screen**  
Select  
Select

You can choose between displaying an image, using the active theme or leaving the screen empty

- Configure the screen saver



**Power save**  
Select



**Save**

First value: enter the duration in seconds before screen light fades  
Second value: enter the duration in seconds before screen light turns off (after the duration of the first and second values the screen light turns off)

#### 4.9 Configure the keys to answer a call



By default, you answer a call by pressing the off hook key. You can also configure your handset to answer a call by pressing any key or automatically without pressing any key.



**Menu**

Access MENU



**Select**

**Access to the handset settings menu**



Select the tab: Calls



**Answer mode**  
Select



**Select**

You answer a call  
**Normal** : pressing the off hook key  
**Any key** : by pressing any key  
**Auto answer** : the phone automatically answers the call

#### 4.10 Call duration and number of messages



Your phone allows you to see the time of outgoing calls and the number of sent messages.



**Menu**

Access MENU



**Select**

**Access to the handset settings menu**



Select the tab: Calls



**Units**  
Select











**Reset**  
Yes

Reset of all counters






#### 4.11 Call screening

You can choose to accept or reject the callers identified in the list of filtered calls

	<b>Menu</b>	Access MENU
	<b>Select</b>	<b>Access to the handset settings menu</b>
		Select the tab: Calls
	<b>Caller filter Select</b>	
	<b>Mode Select</b>	Accept list : accept calls in the list of filtered calls Block list : reject calls in the list of filtered calls. A specific tab is visualized for automatically rejected incoming calls. Rejected calls details are displayed in the missed calls log. Filter off : disable filtering
	<b>List Select</b>	Define the list of filtered calls
	<b>Add</b>	Add a number to the list from your personal directory or by entering the number
	<b>More</b>	Edit : change the selected filtered number Delete : remove the selected filtered number Delete all : remove the complete list






#### 4.12 Configure your phone during charging

You can define the phone behavior while charging.

	<b>Menu</b>	Access MENU
	<b>Select</b>	<b>Access to the handset settings menu</b>
		Select the tab: Calls
	<b>Silent charging Select</b>	
	<b>Mode Select</b>	Off : Disable the feature Discon. : All incoming calls are automatically rejected Silent : ringer and vibrate are disabled during charging

#### 4.13 Affected shortcuts to the navigation keys (out of navigation use)

You can assign a feature to each key navigation.







	<b>Menu</b>	Access MENU
	<b>Select</b>	<b>Access to the handset settings menu</b>
		Select the tab: Calls
	<b>Shortcuts Select</b>	Select a shortcut and assign a feature to it
	<b>Select Select</b>	Select a shortcut and assign a feature to it



Shortcuts only work out of communication.














#### 4.14 Associate states of the handset to the LED colours

You can define when the LED will light red, green and orange, according to a state or event of the phone.

	<b>Menu</b>	Access MENU
	<b>Select</b>	<b>Access to the handset settings menu</b>
		Select the tab: Calls
	<b>LED signal</b>	
	<b>Select</b>	
	<b>Select</b>	Choose the color of the LED and choose the event that will light the LED










#### 4.15 Change the PIN Code

Use the change PIN Code feature to change the PIN Code on the handset.

	<b>Menu</b>	Access MENU
	<b>Select</b>	<b>Access to the handset settings menu</b>
		Select the tab: General
	<b>Security</b>	
	<b>Select</b>	
	<b>Change PIN code</b>	
	<b>Select</b>	
	<b>PIN code:</b>	Enter the PIN Code (0000 by default)
	<b>Ok</b>	Validate
	<b>New PIN code:</b>	Enter the new PIN Code
	<b>Ok</b>	Validate
	<b>Verify new PIN code :</b>	Enter the new PIN Code
	<b>Ok</b>	Validate

#### 4.16 Enable or disable the Automatic keypad lock feature


 








Use the Automatic keypad lock feature to disable key input and prevent accidental operation. Automatic keypad lock activates in 30 seconds after the terminal display go to power save mode and no keys are pressed.

	<b>Menu</b>	Access MENU
	<b>Select</b>	<b>Access to the handset settings menu</b>
		Select the tab: General
	<b>Security</b>	
	<b>Select</b>	
	<b>Automatic keylock</b>	
	<b>Select</b>	
	<b>On / Off</b>	Enable or disable the feature
	<b>Select</b>	




#### 4.17 Enable or disable the phone lock feature

Use the phone lock feature to avoid unauthorised use of your handset. If the phone lock is set, then upon turning on your handset you'll be asked to enter the PIN code.

	<b>Menu</b>	Access MENU
	<b>Select</b>	<b>Access to the handset settings menu</b>
	<b>Security</b>	Select the tab: General
	<b>Select</b>	
	<b>Phone lock</b>	
	<b>Select</b>	
	<b>PIN code:</b>	Enter the PIN Code
	<b>Ok</b>	
	<b>On / Off</b>	Enable or disable the feature
	<b>Select</b>	









## 5.1 Introduction



Your system offers a wide range of services and features. To activate a feature when you are not in communication, take the set off the hook and enter the feature code followed by the parameters to associate to the feature. For information on the features codes list, contact your installer or administrator.

 You can program a feature on a speed dial key by entering the feature code followed by parameters associated to the feature. Refer to chapter: Speed dial.



## 5.2 Redialing


You can call back from your phone call log.

	<b>Call</b>	Access to the calls log All incoming, outgoing, missed or unanswered calls are displayed in the call log Select the desired log:  all calls  answered calls  sent calls  missed calls
		
	<b>OR</b>	Select the recipient from the call log Send the call
	<b>Call</b>	




 The call log can also be accessed from the menu  .


### ■ Redialling the last number dialled (redial) (single-line terminal only)


		You are not connected Enter the feature code: <b>Callback last caller</b>
---	---	--

 Code to associate to a speed dial key: Callback last caller.

## 5.3 Immediate forward to a number (single-line terminal only)

		You are not connected Dial the feature code for the forwarding type you want : immediate, busy line, no answer, etc.
		Enter the destination number

 When the set is forwarded, you hear a specific tone after hooking off the set.

 Code to associate to a speed dial key: Forward + No. of diversion telephone.

## 5.4 Diverting your calls to your voice message service (single-line terminal only)



You are not connected  
Dial the feature code for the forwarding type you want : immediate, busy line, no answer, etc.



Enter the voicemail number



When the set is forwarded, you hear a specific tone after hooking off the set.



Code to associate to a speed dial key: Forward + Voicemail number.

## 5.5 Cancelling all diversions (single-line terminal only)



You are not connected  
Enter the feature code: **Forward cancellation**



Code to associate to a speed dial key: ; Forward cancellation.

Forward cancellation



You can cancel the forward from the handset that the calls are forwarded to (forward cancellation code) or from another company handset (remote forward cancellation code + number of forwarded handset).

A diversion can also be cancelled by programming another type of diversion.

## 5.6 Consulting your voice mailbox



A voice prompt indicates the presence of messages when you hook off the phone.

### ■ Single-line set




 







You are not connected  
Enter the feature code: **Voice mail**

Follow the voice guide instructions


 






Code to associate to a speed dial key: Voice mail + Voicemail number. + personal code


■ Define the voicemail number

	<b>Menu</b>	Access MENU
	<b>Select</b>	<b>Access to the messaging menu</b>
		Access to the voicemail configuration
	<b>Voicemail number</b>	
	<b>Select</b>	
	<b>Enter number</b>	
	<b>Select</b>	
	<b>Save</b>	Your voice mailbox access number


■ Consulting your voice mailbox

	<b>Menu</b>	Access MENU
	<b>Select</b>	<b>Access to the messaging menu</b>
		Access to your Inbox
	<b>Listen to voicemail</b>	Select message
	<b>Select</b>	Follow the voice guide instructions

### 5.7 Additional services (single-line terminal only)


 This manual describes the main services allowed by your set. Do not hesitate to consult the feature codes table to access to these main services.

### 5.8 Text mail

 This feature is not available.

## 6.1 Subscribing the handset to a DECT system

You must subscribe the handset to at least one DECT system before you can use the handset to make a call.

 The handset can operate with a maximum of four DECT systems

When the handset is not yet subscribed to a system, the following message appears on the display screen: Register.

Before you subscribe to a DECT system, obtain the following information from your system administrator:








**PARK code:** Use a PARK code system ID only if more than one DECT system overlaps in your location.


**DECT system name:** The name of the system to which you subscribe. After you enter the system name, it appears on the idle display.







**Phone number:** The local phone number assigned to your DECT handset.

When entering text, you can switch to the upper case mode, lower case and the numeric keypad by pressing successively on the # key.

**To subscribe your handset to a DECT system, perform the following steps.**







- |   |   |   |
|---|---|---|
|    | <b>Menu</b>   | Access MENU   |
|    | <b>Select</b>   | <b>Access to the handset settings menu</b>                        |
|    |  | Select the tab: Connectivity                                      |
|   | <b>Register Select</b>  | Place on cursor (highlight) : Register                            |
|  | <b>Ok</b>   | Enter the PIN Code (0000 by default)                              |
|  | <b>Select</b>   | Select an empty slot or an existing system which will be replaced |

 If there are no more free slots, you have to replace an existing system to add a new one.

- |   |                          |   |
|---|--------------------------|---|
|  | <b>Park Save</b>         | Use a PARK code system ID if more than one DECT system overlaps in your location. If only one DECT system is available, make no entry, and press the Skip soft key. |
|  | <b>OR Skip</b>           | If only one system is available   |
|  | <b>PIN code: Ok</b>      | Enter the PIN Code (0000 by default)  |
|  | <b>Network name Save</b> | Enter the system name   |
|  | <b>Save</b>              | Enter the phone number assigned to your handset   |
|  | <b>Caller info Save</b>  | Enter the value: "1"  |
- Once recording is complete, the set automatically switches to idle mode. Once recording is complete, the set automatically switches to idle mode.




## 6.2 Selecting your telephone system

You can switch from one registered system to another.


	<b>Menu</b>	Access MENU
	<b>Select</b>	<b>Access to the handset settings menu</b>
		Select the tab: Connectivity
	<b>Register Select</b>	Place on cursor (highlight) : Register
	<b>Ok</b>	Enter the PIN Code (0000 by default)
	<b>Select</b>	Select a system

## 7.1 Calendar




You can consult and manage an agenda on your phone.

	<b>Menu</b>	Access MENU
	<b>Select</b>	<b>Access the agenda menu</b>
	<b>More Select</b>	Access to the agenda View week : View of the week View month : View of the month

■ Modify the agenda format











	<b>More Select</b>	Access to the agenda View week : View of the week View month : View of the month
---	--------------------	--

■ Select a date





	<b>More Go to date</b>	Access to the agenda
	<b>Select</b>	Enter date
	<b>Select</b>	View the agenda for the selected date

 You can select a date with the navigation keys





■ Programming an appointment reminder

	<b>Menu</b>	Access MENU
	<b>Select</b>	<b>Access the agenda menu</b>
	<b>Select New appointment</b>	
	<b>Add</b>	
	<b>Continue</b>	Enter date
	<b>Continue</b>	Enter the beginning time
	<b>Select</b>	Choose the term of appointment
	<b>Continue</b>	Enter the subject of the appointment
	<b>Continue</b>	Enter the place of the appointment
	<b>Select ;</b>	Define when the reminder will be activated before the appointment





■ Define when the reminder will be activated before the appointment

	<b>Menu</b>	Access MENU
	<b>Select</b>	<b>Access the agenda menu</b>
	<b>Select</b>	Select a date View the agenda for the selected date
	<b>More</b>	Select the appointment Change the appointment by filling in the fields as described in the creation of appointments


 



 


■ Copying an appointment reminder

	<b>Menu</b>	Access MENU
	<b>Select</b>	<b>Access the agenda menu</b>
	<b>Select</b>	Select a date View the agenda for the selected date
	<b>Copy</b>	Select the appointment
		Change the appointment by filling in the fields as described in the creation of appointments


 






■ Delete an appointment reminder

	<b>Menu</b>	Access MENU
	<b>Select</b>	<b>Access the agenda menu</b>
	<b>Select</b>	Select a date View the agenda for the selected date
	<b>Delete Yes</b>	Select the appointment

## 7.2 Calculator







	<b>Menu</b>	Access MENU
	<b>Select</b>	Access to the calculator, countdown or wake up features
	<b>Calculator Select</b>	
		Enter a digit (keys 0 to 9)
	 <b>Select</b>	Select the operation
	 <b>Select</b>	Display the results

## 7.3 Stopwatch








	<b>Menu</b>	Access MENU
	<b>Select</b>	Access to the calculator, countdown or wake up features
	<b>Stopwatch Select</b>	
	<b>Start</b>	Start the stopwatch
	<b>Lap</b>	Make an intermediate step (the last 2 measures are displayed)
	<b>Stop</b>	Stop the stopwatch
	<b>Continue</b>	Restart the stopwatch after stopping
	<b>Reset</b>	Reset the stopwatch



## 7.4 Wake up services

	<b>Menu</b>	Access MENU
	<b>Select</b>	Access to the calculator, countdown or wake up features
	<b>Alarms Select</b>	
	<b>Alarm Select</b>	
	<b>Save</b>	Enter wake up hour
	<b>Turn off</b>	Deactivate a programmed wake up

### ■ Program a recurring alarm

	<b>Menu</b>	Access MENU
	<b>Select</b>	Access to the calculator, countdown or wake up features
	<b>Alarms Select</b>	
	<b>Recurrent alarm Select</b>	
	<b>Continue</b>	Enter wake up hour
	<b>Mark Ok</b>	Mark the days when the alarm sounds and validate
	<b>Turn off</b>	Deactivate a programmed wake up



To modify a wake up alarm, select it and change the values

## 8.1 Characteristics of the mains power adapter

- Entry: 100/240 V - 50/60 Hz
- Exit: 12 V DC - 500 mA



The mains power socket used must be close to the charger/holder and easily accessible, so that it can be used as an 'on/off' facility.

## 8.2 Headphone / external microphone

The side of the telephone features a headphone / external microphone socket. Contact your retailer for information on the various headphone models.

Your headset must be 2.5mm jack type.

Make sure to deactivate the Bluetooth feature if it is activated.

## 8.3 Cleaning your telephone

Your telephone does not require any particular servicing. However, it may be cleaned using a soft, damp cloth.



Do not use soap or detergent that would risk altering the colours or damaging the surface of the telephone.

## 8.4 Transporting and protecting your telephone

To avoid losing your telephone, get into the habit of clipping it onto your belt. Your telephone can also be carried in a protective case.



Various models of carrying case are available. Ask your installation technician for information. It is vital to use the special protective carrying case if your telephone is to be used in an industrial environment (presence of dust, filings, vapours of diverse origins and risk of being dropped). If the telephone is used with a carrying case, the belt clip must be removed.

## Safety Instructions

- Changes or modifications to the equipment not expressly approved by the party responsible for compliance could void the users authority to operate the equipment.
- To limit the risk of interference, people with pacemakers must keep the wireless telephone away from their equipment (minimum distance of 15 cm).
- It is recommend to follow the standard acceptance procedures before using this equipment in human safety critical areas (hospitals...).
- DECT equipment can only be used to establish links between fixed points if these links are temporary and the equivalent isotropically radiated power at the antenna is less than 250 mW.
- The conditions of access to a DECT equipment telepoint network shall be stipulated by contract with the operator of the authorized telepoint network concerned.
- Do not expose your telephone to severe conditions (rain, sea air, dust, etc.).
- You must not switch on or use your telephone near gas or inflammable liquids.
- No guarantee is given concerning possible interference affecting DECT equipment, due to other authorised utilisation of the radio frequencies concerned.
- The headset includes magnetic elements that may attract sharp metallic objects.
- There is a danger of explosion if the battery is replaced incorrectly - user only the battery with the reference 3GV28041AB (1.2V 1500 mAh) 3BN67202AA (3.7V 650mAh).

## Regulatory Statements

### EU/EFTA

This equipment is in compliance with the essential requirements of R & TTE Directive 1999/5/EC. The Declaration of Conformity may be obtained from your installer.

### USA and Canada

This device complies with Part 15 of the FCC Rules and with RSS-210 of Industry Canada. Operation is subject to the following two conditions : (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules and ICES-003 of Canada. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try correct the interference by consulting the dealer.

### Exposure to Radio Frequency Signals.

This device has been designed and manufactured not to exceed the SAR (Specific Absorption Rate) radio frequency power transmission limits established by the different countries concerned. The SAR value is 0.09 W/kg (the globally accepted maximum limit being 1.6 W/kg).

### User Instructions

Only use the handset in temperatures between -5° C to +45° C (23° F to 113° F).

This apparatus is Hearing Aid Compatible (HAC).

### Acoustic shock protection

The acoustic level of the signal generated by the handset earpiece is less than 130 dBspl for a transient signal (123 dBspl for Australia) and less than 118 dBspl (rms) for a continuous signal (120 dBA for Australia).

### Directive 2003/10/EC specifying the risks inherent in noise at work

The ring contributes towards overall daily noise; at its maximum setting, the level is 105 dBA at 60 cm from terminal. To reduce the level, the following is recommended:

- reduce the setting (9 levels of 5 dB)
- program a progressive ring.

This device can be used for indoor operation in all the countries; you must consult your installer for an outdoor usage.

### Privacy

Privacy of communications may not be ensured when using the handset or any additionnal Bluetooth device.

### Disposal

- The equipment must be returned to a collection point for electronic equipment waste disposal.
- Defective batteries must be returned to a collection point for chemical waste disposal.

